



Instruction

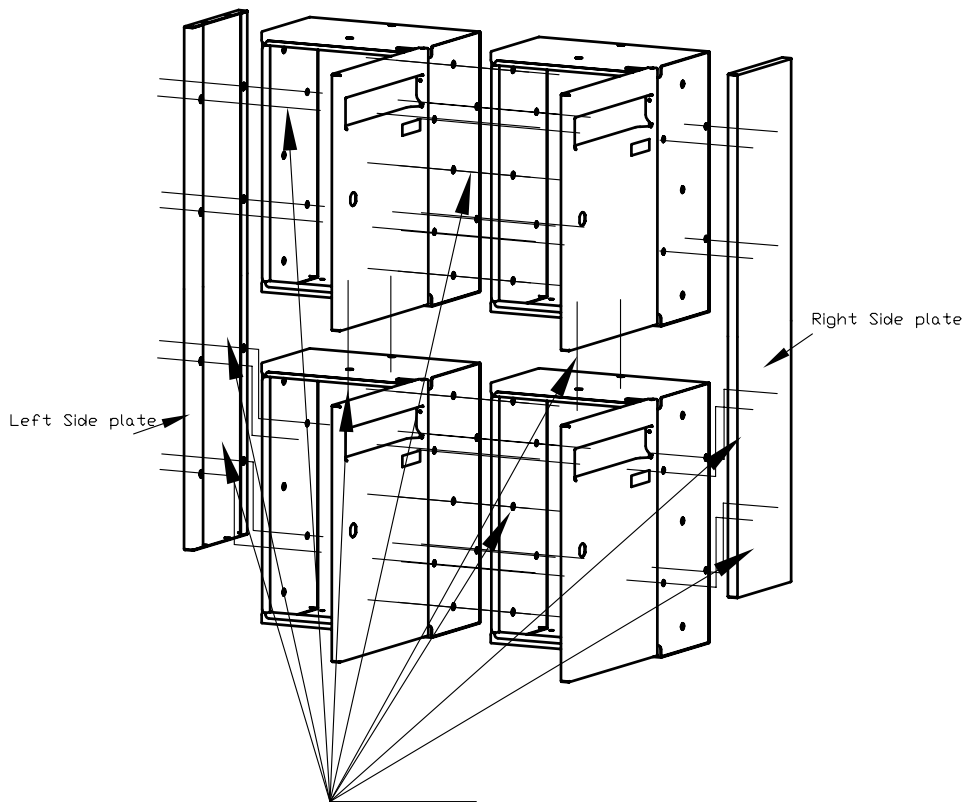

1. Assemble the mailbox through 7 screw holes on each side of the Mailbox.  
(M6 screw, M8 washer and M6 nut)
2. Assemble Left side plate & Right side plate  
(M6 screw, and M8 washer)

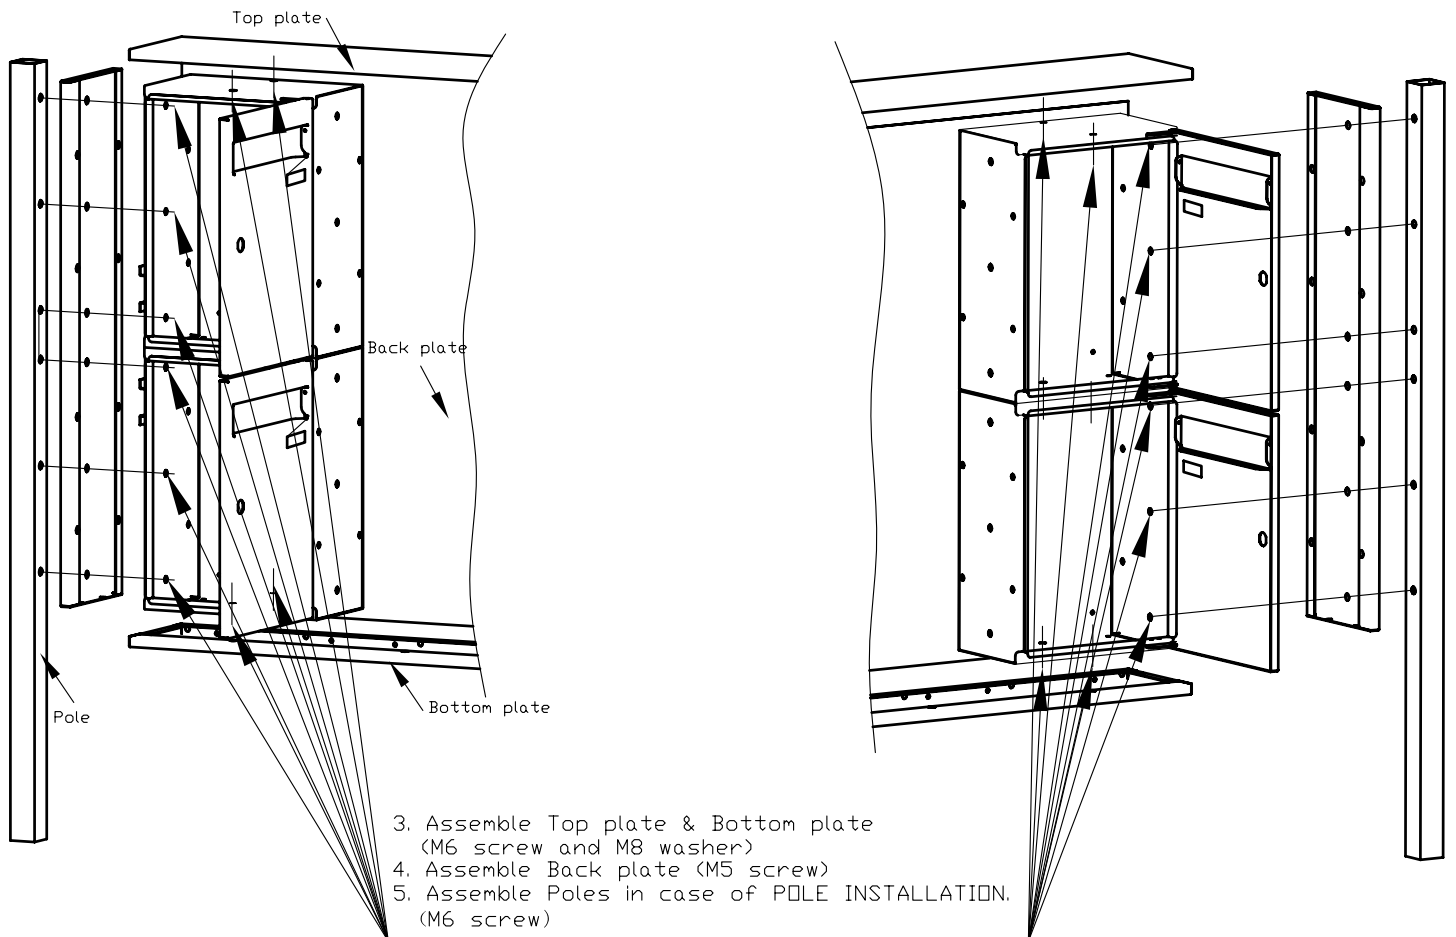

3. Assemble Top plate & Bottom plate  
(M6 screw and M8 washer)
4. Assemble Back plate (M5 screw)
5. Assemble Poles in case of POLE INSTALLATION.  
(M6 screw)